

CalMAN Home Express Quick Start Guide

Thank you for purchasing the CalMAN Home Express calibration package. The Home Express workflow guides you through the basic steps of optimizing your television display's picture settings to conform to industry color standards.

This document is available in pdf format at:

http://www.spectracal.com/Documents/QSGs/CalMAN_Home_Express_QuickStart.pdf

(SpectraCal Support page > CalMAN Home Express)

To get started with CalMAN Home Express:

1. Install CalMAN

For Windows

1. Using the supplied link, or at www.spectracal.com/downloads, download and install the CalMAN Home Video software.
2. Connect the SpectraCal C3 Colorimeter to a USB port on your Windows computer.

For Mac

These instructions are for running CalMAN Home Express within a VMware Fusion virtual Windows machine on a Mac.

1. Set up a VMware Fusion virtual Windows machine on your Mac. CalMAN requires Windows Vista or higher (Windows 7® SP1 or higher recommended). Set VMware Fusion to a bridged networking mode.
2. Using the supplied link, or at www.spectracal.com/downloads, download and install the CalMAN Home Video software.
3. Connect the SpectraCal C3 Colorimeter to a USB port on your Mac computer.

2. Run CalMAN


- A. Open the CalMAN software by double-clicking the new CalMAN desktop shortcut.



SpectraCal

3. Add your Home Express license to CalMAN


- A. Find your CalMAN license certificate in the CalMAN Home Express shipping box.
- B. Type the entire Home Express license string that you received into the *New License* text box (or, register online to receive an electronic version to copy & paste).

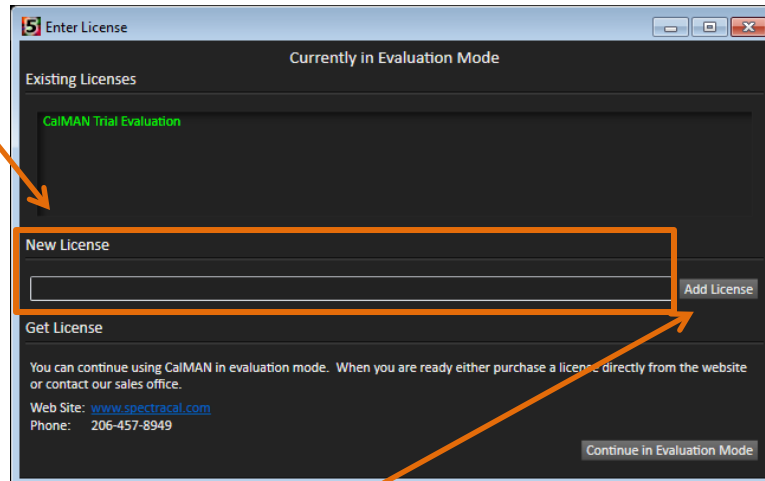

- C. Click the *Add License* button.

4. Open the Home Express workflow

- A. From the main CalMAN menu, select *Open Workflow Template*.
- B. Select the "Home Express" workflow.

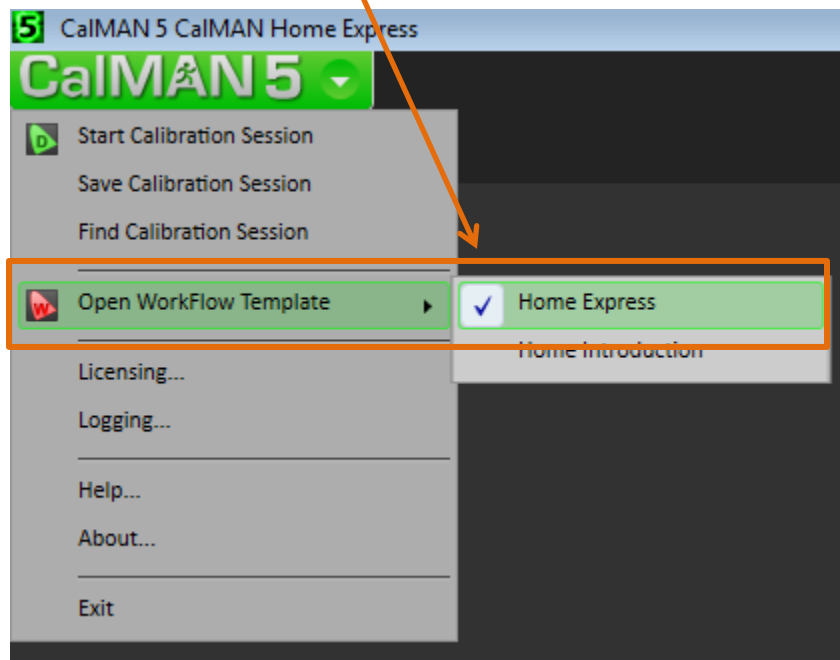

- C. Click the *Next* button, at the lower right of the Welcome page to advance to the Hardware Setup page.


SpectraCal

5. Connect measurement hardware

- A. Follow the instructions to connect CalMAN to your MobileForge test pattern source.

Follow this link for additional information on MobileForge (available at www.spectracal.com/support):

<http://www.spectracal.com/Documents/QSGs/SpectraCal%20MobileForge%20QuickStart.pdf>

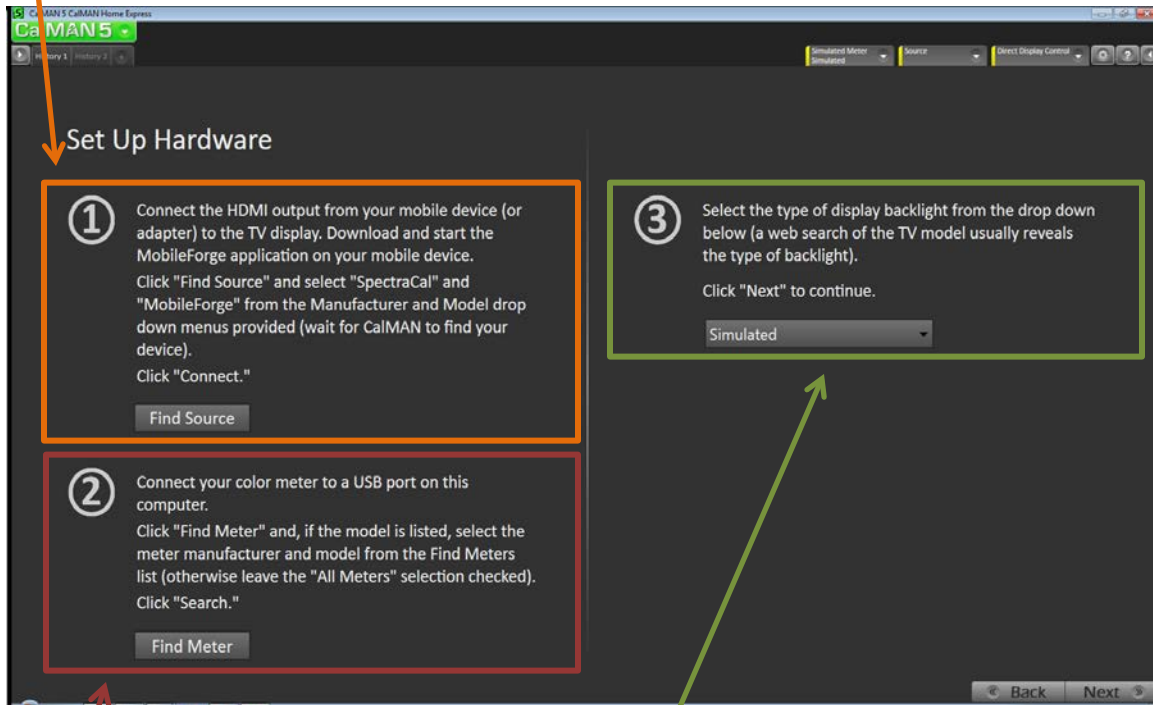

- B. Connect CalMAN to your color meter.
C. Select the type of backlight used in your display.
D. Click *Next* at the bottom right of this page to advance to the next page.

6. Calibrate your display

Follow the guidance on each of the next pages to complete your display calibration.

WHAT NEXT?

For additional information on CalMAN Home Video calibration, please contact SpectraCal at:

Phone: +1 206 420 7514, or

Email: info@spectracal.com

We will answer your questions and work with you to get the best solution for your needs.